


## WATER SEALING FOR TIE RODS

### Flupp

A flexible, tight fitting plug for the internal water sealing of PVC spacer tubes prior to filling with a recommended grout – i.e. In-formstop cement.

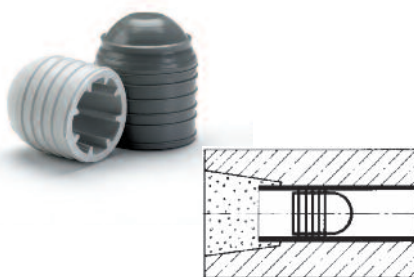

Code	Item	Pack Qty	Weight Kg/100
F20	Flupp 20	1000	8.50
F22	Flupp 22	1000	9.50
F26	Flupp 26	500	14.40
F32	Flupp 32	500	25.00

### Water Barrier for Spacer Tube

The waro is slipped onto K22 spacer tube to prevent water seepage. It is recommended that because of the tight fit, the sealing ring is moistened before fitting.

**Not suitable for high pressure water.**



Code	Item	Pack Qty	Weight Kg/100
WARO	WARO	100	3.0

### In-formstop

A specially developed cement for plugging and waterproofing tie holes in concrete walls, becoming waterproof within hours and withstanding a hydrostatic pressure of 10 bar after full curing. Trowel applied. Water Council approved.



Code	Item	Keg Weight Kg
TS8	In-formstop	8.0

Coverage approximately 220 holes per 8kg Keg.



## TAPES

### Formwork Tape

A tough, high matt PVC tape used for covering joints in formwork shutters. Excellent adhesive qualities even when residual oil and dust are present. Supplied in single rolls or boxes of 18.



Code	Size
FWT	Length: 33m Width: 50mm

### Formwork Foam Tape

A cross linked closed cell polyethylene foam combined with high pressure adhesive. Used for sealing joints in formwork to prevent grout loss.



Code	Width	Thickness	Length
FT	12mm	6mm	10m
FT12	24mm	12mm	5m